

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. IF YOU ARE UNSURE ABOUT YOUR CEILING TYPE OR WHAT MOUNTING METHOD YOU SHOULD USE, CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE.



THIS LIGHTING FIXTURE WORKS WITH ELV DIMMERS ONLY. CONNECTING IT TO TRIAC DIMMERS MAY DAMAGE THE ELECTRICAL INSTALLATION.

PARTS ENCLOSED:



- (A) Cross-bar with a hook [2]
- (B) Quick link [2]
- (C) Canopy [2]
- (D) Loop nut [2]
- (E) Main Rod [2]
- (F) Extension rods [6]
- (G) Glass Cylinders [12]
- (H) Retainer Rings [12]
- (I) Inner Ring [12]
- (J) Outer Ring [12]

(L) Light bulbs [12] (inside cylinders):

- max wattage 40W
- bulb base E12
- max. length 90mm

REQUIRED TOOLS:


Flat screw-driver

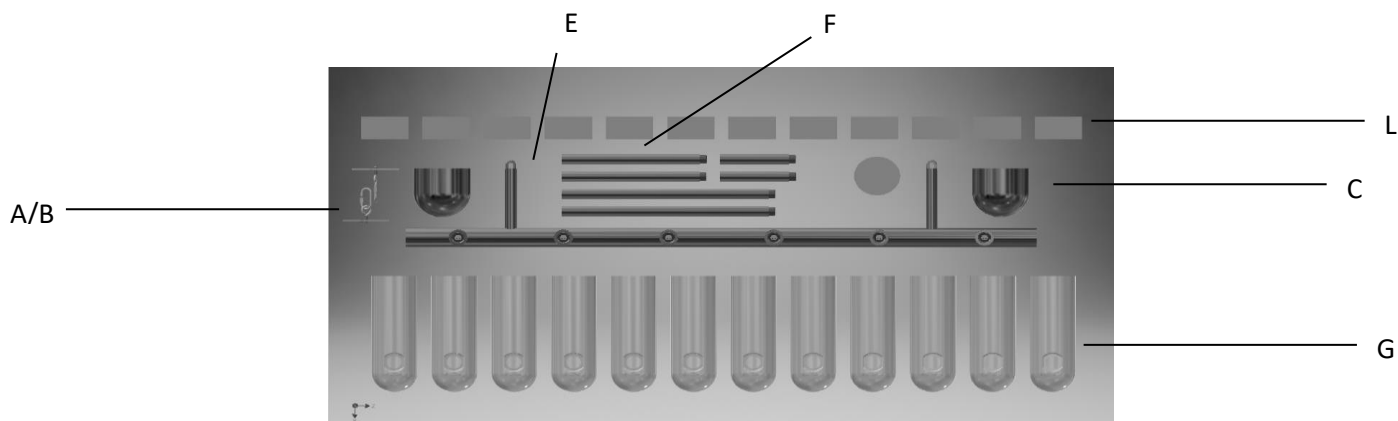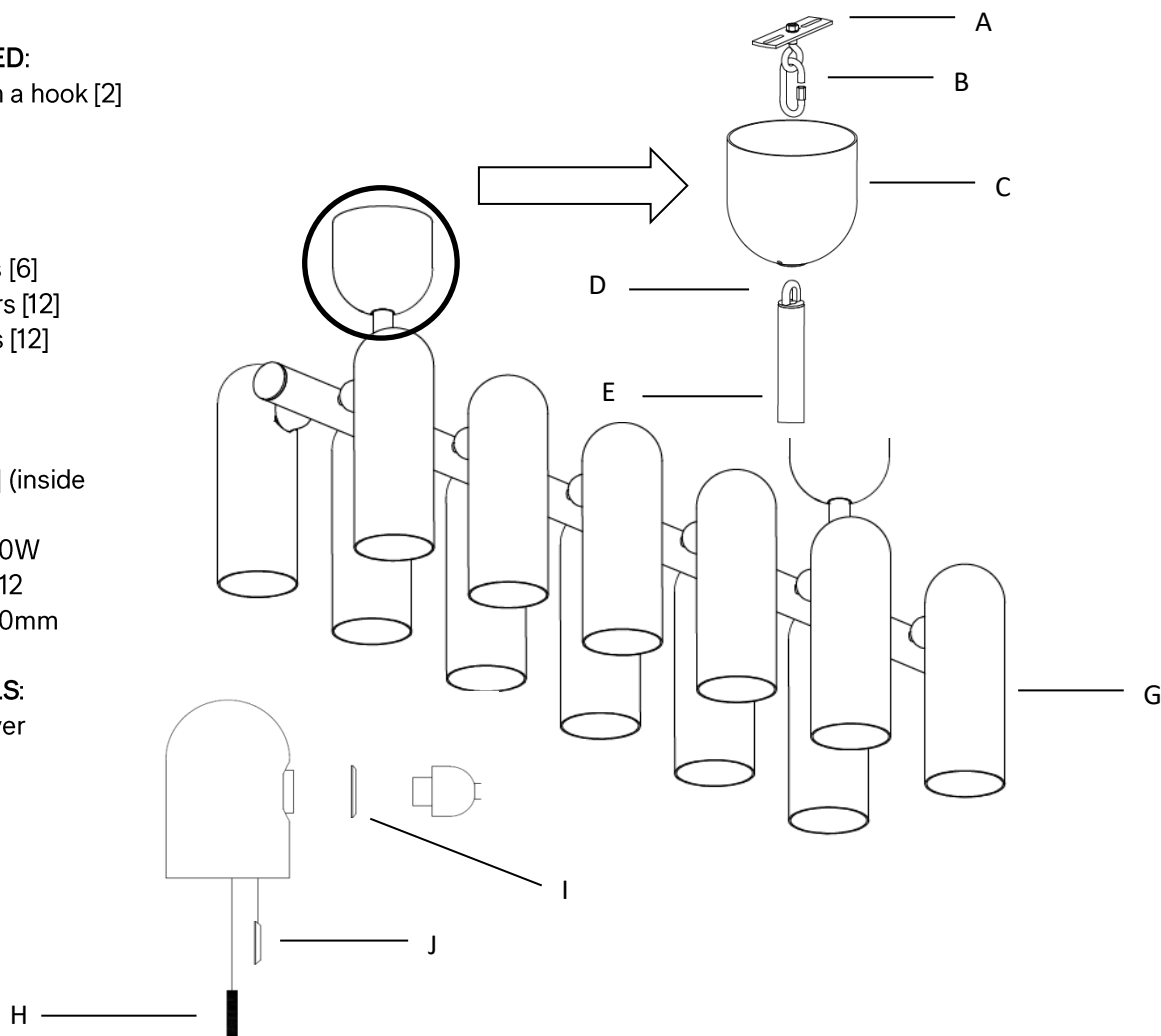




MAKE SURE YOU CUT OFF ELECTRICAL SUPPLY AT THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE COMMENCING ANY WORK

1

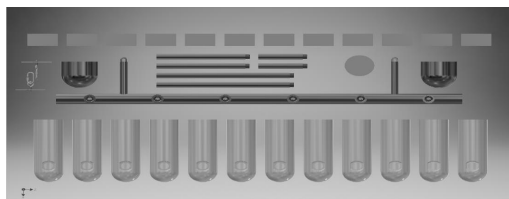

Carefully unpack the contents. **Make sure you do not remove the labels on each socket/cylinder.**


2

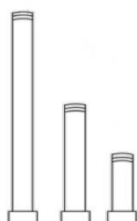

Are you installing extension rods?
YES: Continue to Step 3
NO: Jump to Step 6.

3


x 2

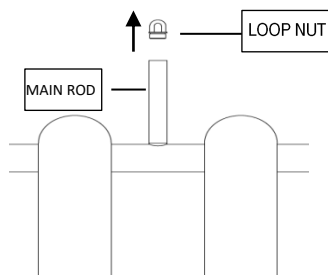

Unscrew the two loop nuts [D] from the two main rods and remove them making sure the wires are not damaged in the process.

4


x 2

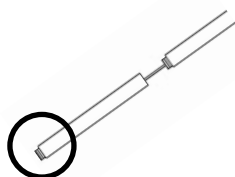


Pick selected extension rods [F] and carefully pull the cords through them. Add the same size extension rods on the side without electrical wires. **NOTE: Make sure the rods are positioned with the outside thread downwards.**

5


x 2

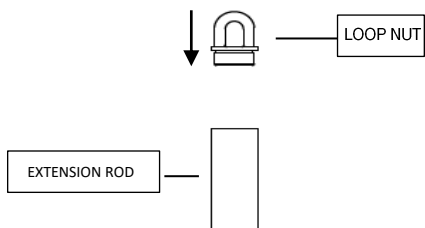


Pull the cords through the Loop Nut [D] and screw it into the main rod. Do the same with the loop nut on the side without electrical wires. **NOTE: Make sure the cord endings are not frayed. If yes, twist them back together.**

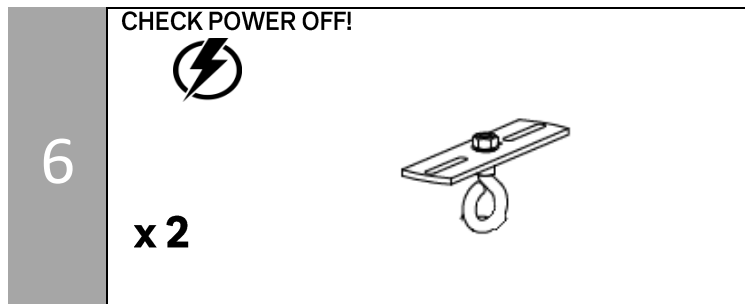


Connect the included cross bars with the hooks to your ceiling junction boxes (bolts not included). **NOTE: If in doubt, consult your local hardware store. The non-electrical side can also be hanged on a ceiling hook of another type.**

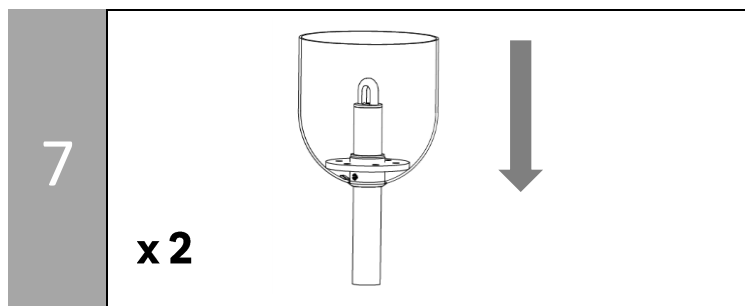


Insert the canopies [C] onto the chandelier rods making sure you pull the electrical cords through the canopy opening first and lower both canopies gently to the bottom.

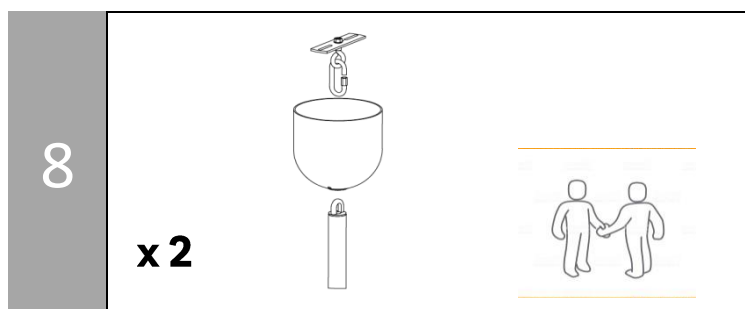


Place the quick links into the cross bar loops, lift the chandelier and hang it onto the quick links. Turn the nuts to close both quick links tight. **NOTE: TWO PEOPLE are needed for this step.**

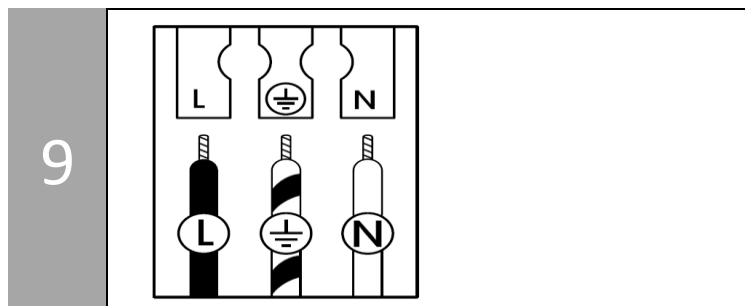


Make all necessary electrical connections. The diagram on the left shows the most common markings and manner of connecting the cords. **NOTE: We recommend installation by a licensed electrician.**

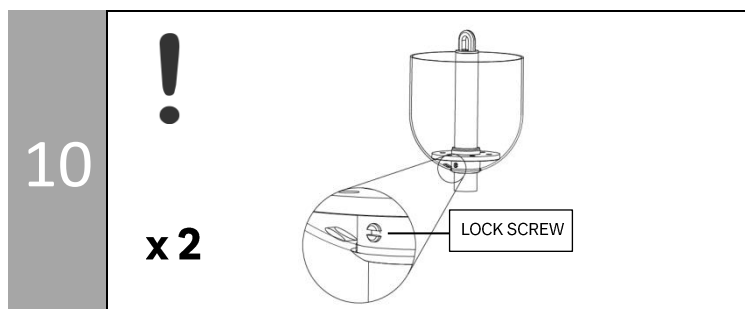


Lift each canopy [C] to be flush with the ceiling and turn the lock screw quarter turn clockwise. **WARNING: do not force the screw more than a quarter turn as the thread can break.**

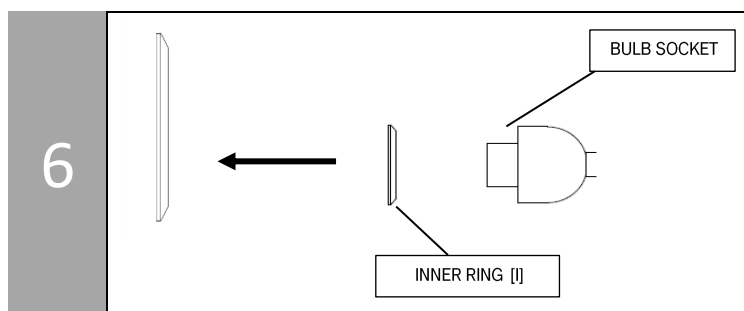

MOUNTING GLASS CYLINDERS:
Remove the retainer ring [G] from the bulb socket, place the inner ring (bigger) onto the socket. **NOTE: angled side to face the socket, the ring will hang loose, you will position it in the next step.**

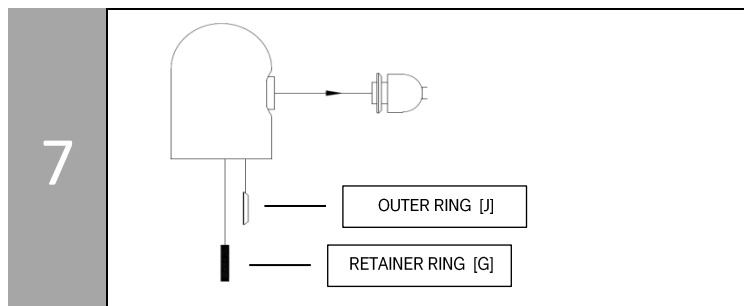

Mount the glass cylinder, place the Outer Ring (J) (smaller) onto the socket and screw the retainer ring [G] onto the socket to secure the glass cylinder. The inner and outer rings let you put the cylinder in the right position. Repeat for all sockets. Make sure the cylinders are aligned.

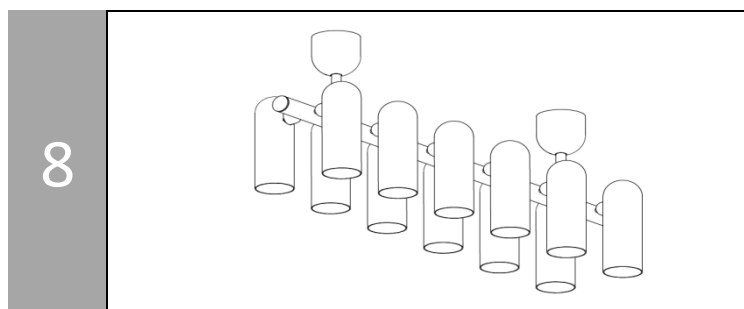

Depending on the model insert up to 12 - 40W max, E12 light bulbs into the sockets (90mm long). Restore power and test the fixture. Assembly is complete

SAFETY INSTRUCTIONS:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

1. Turn off electricity at the main circuit breaker panel before beginning installation.
2. This direct wire fixture must be installed by a certified and licensed electrician. Customer should not attempt to install.
3. This fixture has been rated for up to sixteen (12) - 40W max, E12 light bulbs. To avoid the risk of fire, do not exceed the recommended wattage.
4. If any special control devices are used with this fixture, follow the instructions to assure full compliance with the N.E.C. requirements.
5. This fixture can be used only with a trailing edge dimmer.

WARNINGS:

- Do not mount or unmount the glass cylinders if the light bulbs or fixture is hot.
- All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- Do not use if the light cable / cord is damaged.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off light fixture and allow it and the clothes to cool prior to replacing light bulb.
- Do not touch bulbs when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

CLEANING AND MAINTENANCE

NOTE: Make sure you cut off electrical supply to the lamp before commencing cleaning operations.

Component	Maintenance	Tools
Brass frame	Clean every month using a soft cloth, dampened slightly with water. Make sure the frame is dry before switching it back on.	Soft cloth, water
Glass cylinders	Clean regularly with a soft dry cloth. Clean only the outside of the globe. When more dirty, use a wet cloth first. Grease can be cleaned with a gentle glass cleaner.	Soft cloth Cotton gloves (!)
Bulbs	Make sure your power supply is off before changing the bulb. Unscrew the bulb that needs replacing. Gently remove the bulb by pulling it out and replace with a bulb of the same parameters.	Cotton gloves (!) LED bulbs

NOTE: Please remember solid brass may tarnish over time. This is a natural process. Make sure you follow our guidelines to preserve a great look of Schwung lighting for years.

TROUBLE SHOOTING

NOTE: Dear client, please be assured our team strives to deliver highest quality products. The handmade nature of the products offers a unique aesthetic experience and allows for small imperfections, which is inherent in crafts. If solutions offered below are not sufficient, please do not hesitate and contact our customer service.

Problem	Possible cause	Action
Tarnishing	Oxidation of brass is a natural process. Although it is lacquered, its color may change slightly over time.	No action is necessary apart from regular cleaning. See the Maintenance section.
Crooked hanging	Wrong positioning of cylinders.	Loosen the retainer ring and position the cylinder correctly. Turn the retainer ring gently to hold the position.